


WISPER

Attaching Front Rack for Wisper Wayfarer Range

Time: 20mins (beginner level)

Tools: 5mm Allen key

1. Remove the 5mm Allen machine bolts.
2. Remove the Wisper fascia plate concealing the front rack mount.
3. Offer the front rack in position and hand tighten the first couple of machine bolts into the mount to loosely secure the rack
4. Secure the Wisper front rack with the existing 4 x 5mm Allen cap head bolts provided to secure the Wisper fascia plate.
5. Tighten up the 4 x machine bolts securing the rack to its mounting using a 5mm hex key.

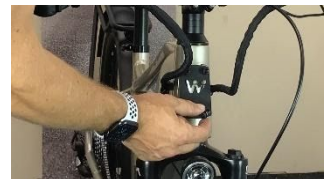

Mounted front rack

